


CANOPY NOTES:

1. USE TAPERED INSULATION TO BUILD-UP 1 1/4" FT. PITCH TO DRAIN.
2. EXTEND ALL EPDM UP MIN. 2" AND UNDER COUNTERFLASHING OR TERMINATION BAR PER MFT. SPEC. NOTE: SECURE EPDM TO VERTICAL FACE OF C3x4.3 STL. CHANNEL (FLUSH WITH TOP OF C12x20.7) AROUND INTERIOR PERIMETER.
3. ROOF DRAIN: W-3230-D (2") BY WADE
4. RUN ROOF LEADER FROM CANOPY THROUGH TO ADJACENT MASONRY PIER AND DOWN TO UNDERGROUND AND ACROSS TO CONNECT TO ROOF LEADER AT MASONRY PIER (COL. LINES D.1,2,4).

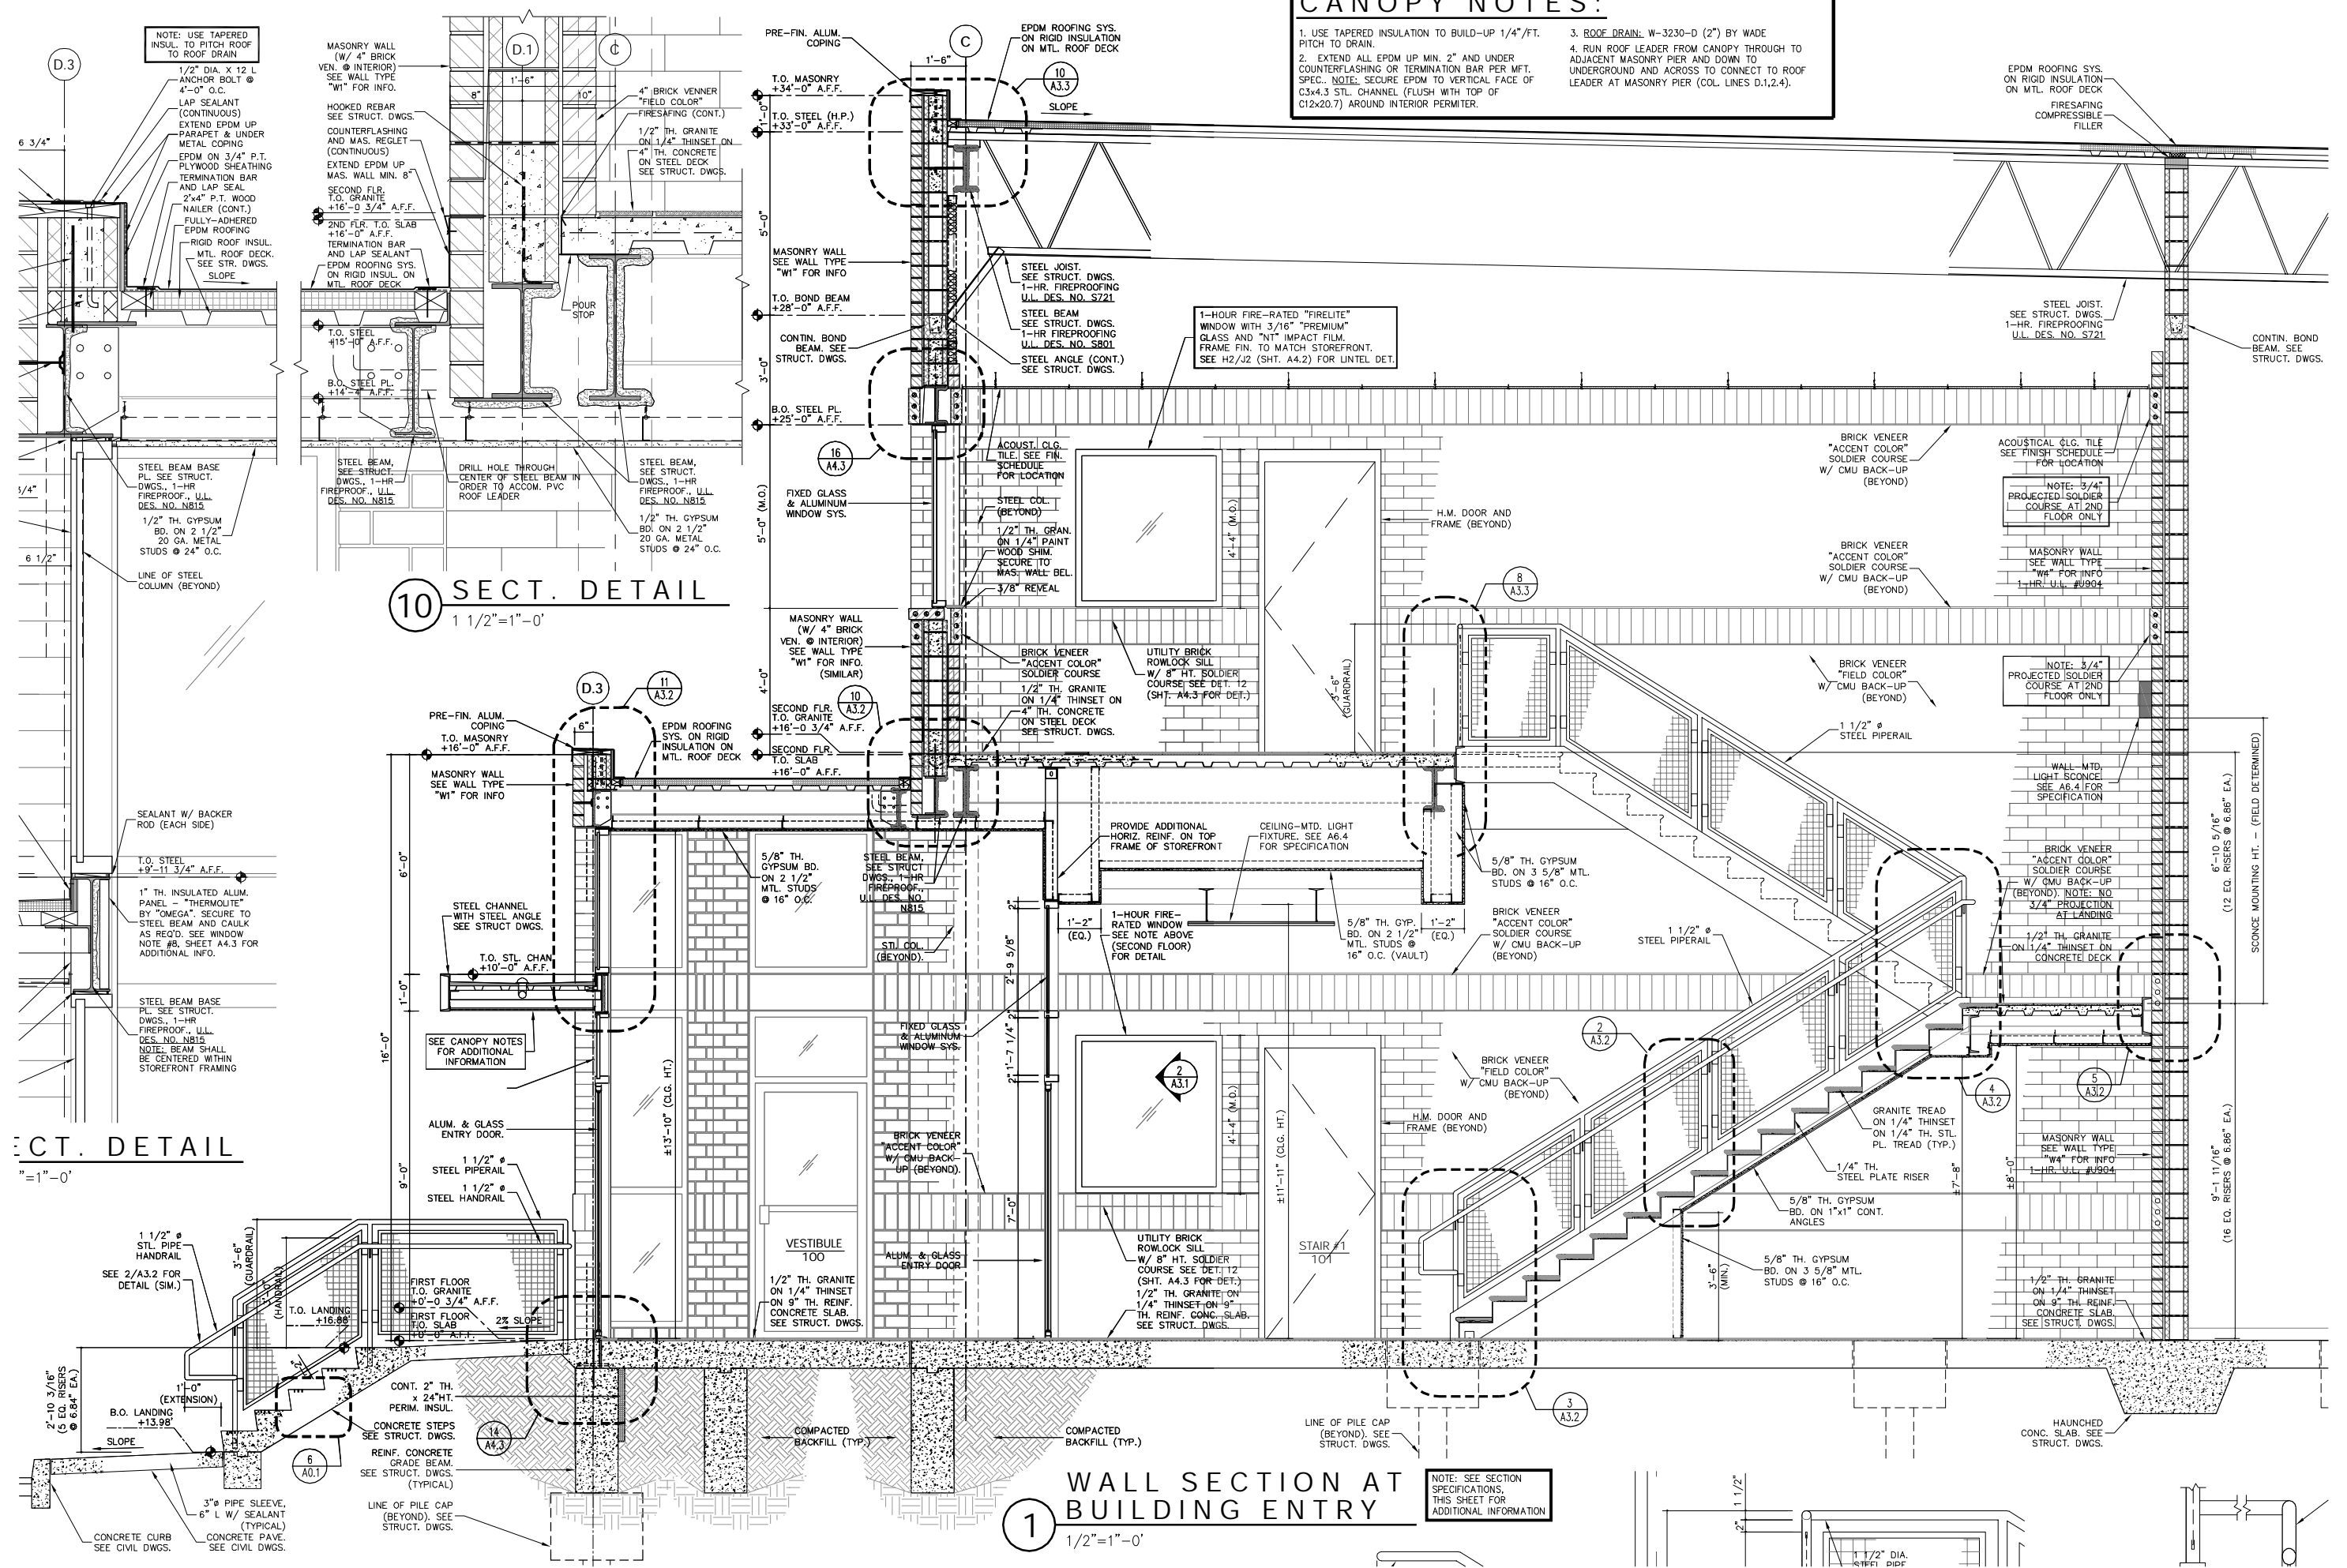

10 SECT. DETAIL
1 1/2" = 1'-0"

1 WALL SECTION AT BUILDING ENTRY
1/2" = 1'-0"

NOTE: SEE SECTION SPECIFICATIONS, THIS SHEET FOR ADDITIONAL INFORMATION